



EMTEC

Movie Cube™ N200



PRODUCT FEATURES

✓ DOES

- ✓ Play DVD files in IFO/ISO format from the main menu
- ✓ Play MKV files but not all the audio/video formats
- ✓ Copy and delete files without the use of a PC
- ✓ Allow to create a Library (15 000 files per category)
- ✓ Work as a NAS (even USB devices)
- ✓ Allow network connection thanks to the Emtec Wi300/Wi350 WiFi dongle or the Ethernet LAN
- ✓ Support DVD players with USB port
- ✓ Output video with a 1080p resolution
- ✓ Support the DTS HD and Dolby True HD sound downmix
- ✓ Allow firmware setup through 2 methods (main menu or at booting)

✗ DOES NOT

- ✗ Support the standby function
- ✗ Support the DTS sound decoding (models 1073DA)
- ✗ Allow to turn on the Movie Cube with the remote control

TROUBLESHOOTING

Frequent issues

- Can not install the firmware (r4133) as the system blocks during the update process
- Can not use the eject button of the USB device
- The remote control doesn't work anymore
The Movie Cube doesn't respond to the remote control

Solution

- Can not install the firmware (r4133) as the system blocks during the update process
- Can not use the eject button of the USB device
- Change the batteries



EMTEC

Movie Cube™ N200

GETTING HELP – Did the customer think about ...

1. Checking our Frequently Asked Question (FAQ)?

Please go to our website: <http://www.emtec-international.com/en-eu/faq> to find solutions.

2. Contacting our technicians?

You can contact our technicians using our Emtec Online Assistance form.

Please check our website: http://www.emtec-international.com/en-eu/online_assistance

 
3. Updating the firmware?

A vast majority of the issues can be solved by updating the product yourself.


Please check our website to download the latest version of the firmware:

http://www.emtec-international.com/en-eu/firmware_mc_list


HOW TO UPDATE THE FIRMWARE ?

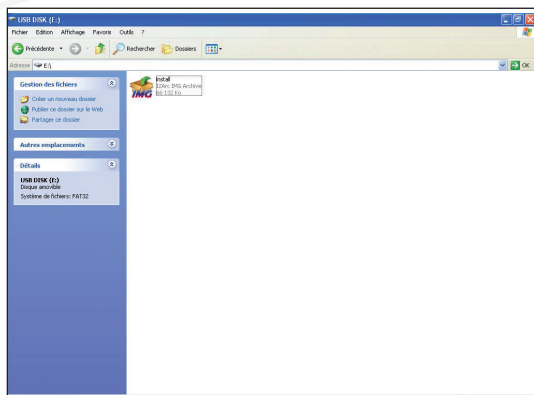

 
1. Copy the 'install.img' file to the root directory of an empty USB stick.

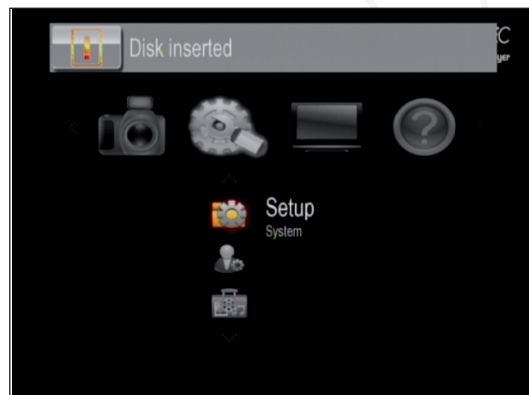

 2. Plug the USB stick into the Movie Cube and from this menu select "Setup" then "System".

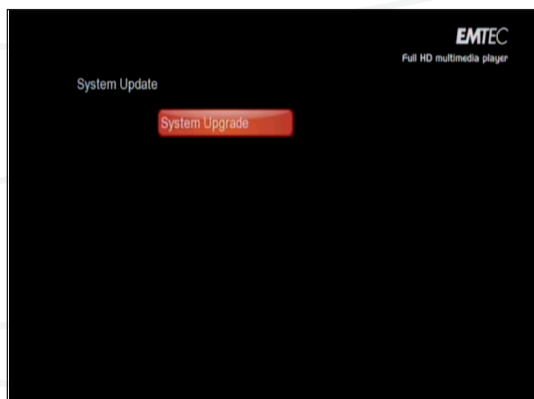

 3. Select the line "System Update." The above screen appears. Press ENTER on the remote control.

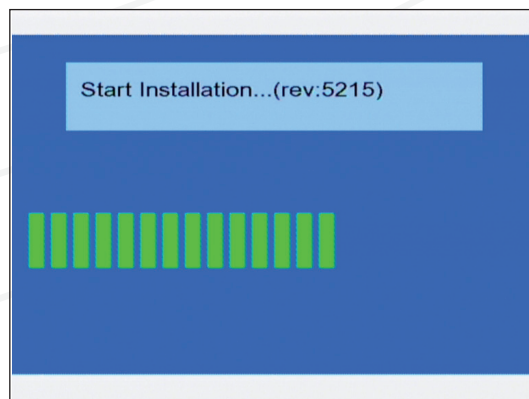


4. The system will reboot and the firmware upgrade will start. DO NOT UNPLUG THE USB KEY DURING THE UPDATE !

WHAT'S IN THE BOX



 Player

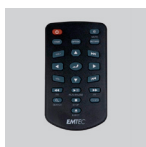

Remote +
batteries



RCA cable



Scart Out
Adaptor



Power supply



Quick
Installation
Guide



CD with user
manuals

2011 - 03